 


ELECTRIC FRUIT CRUSHER

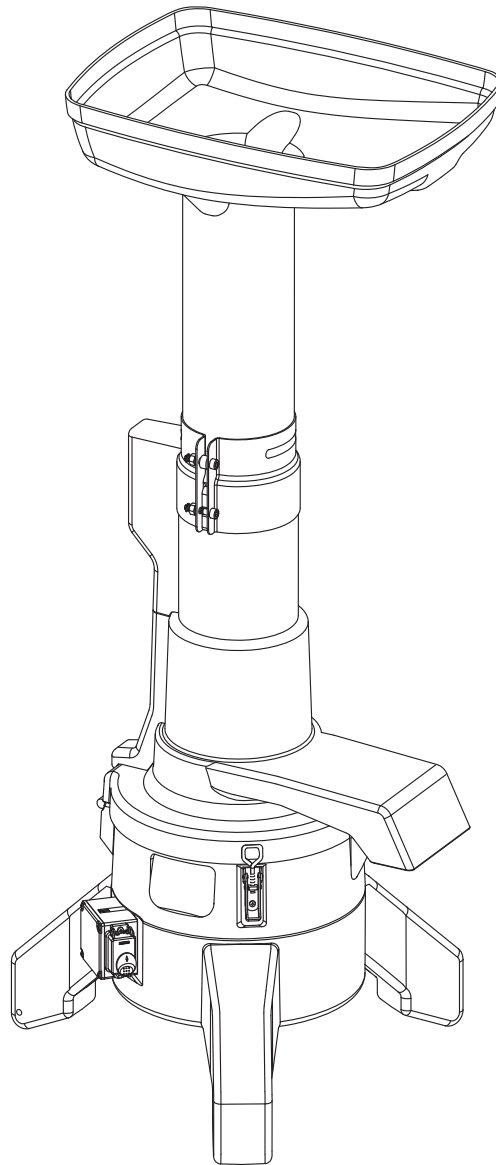

GENERAL INFORMATION

 
Product Overview

This electric fruit crusher is specifically designed for finely crushing electric fruits (e.g., apples, pears) to optimize juice extraction. It is not suitable for stone fruits (e.g., cherries) or garden waste (e.g., branches).

Operating instructions

In order to ensure your new fruit crusher will work reliably and safely from the first time you use it and throughout its entire operating life, we have written these instructions. Please read them carefully before using the product for the first time. If you follow these tips and instructions carefully, the unit will work to your utmost satisfaction and will last you for a long time to come. Should you decide to pass this product on to a third party, please ensure to hand over the operating manual as well. To ensure, that you will enjoy your newly purchased crusher, please observe the following safety and operating instructions.



Overview of parts

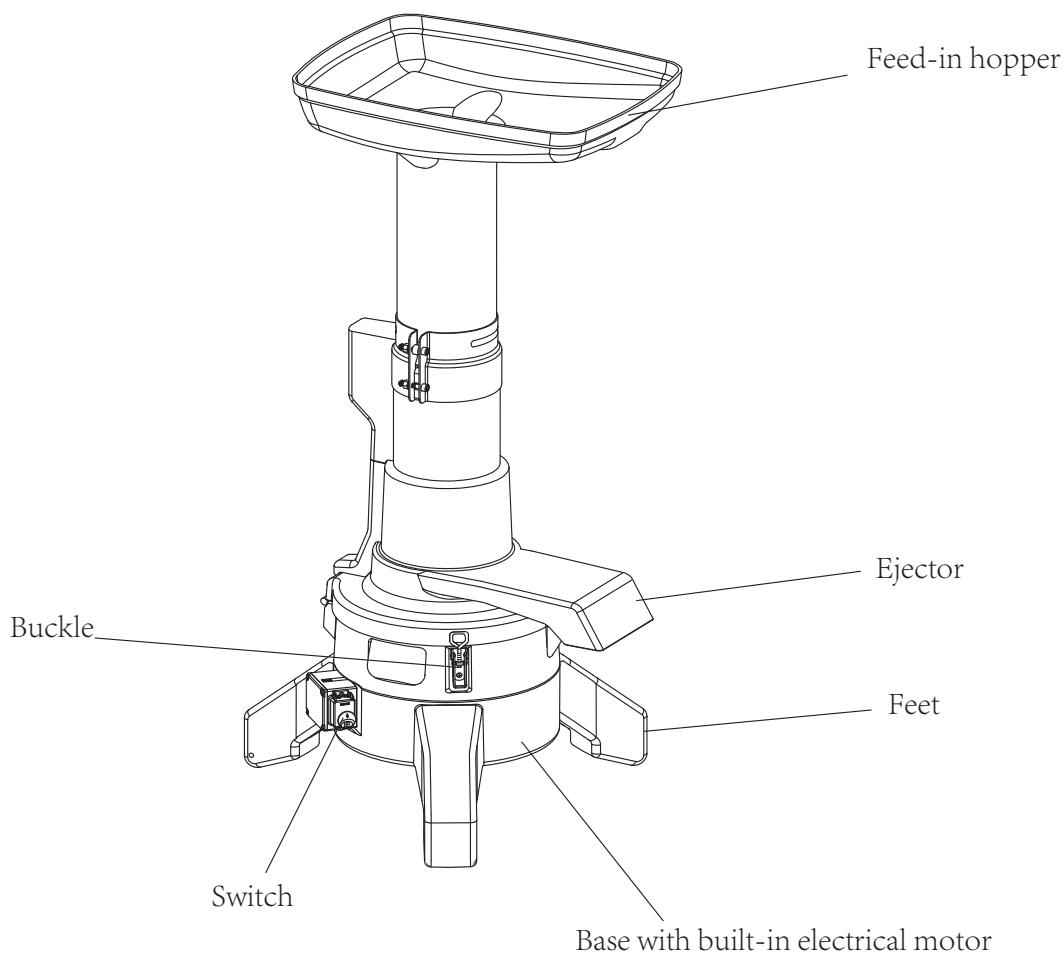

Installation Instructions

To save on freight costs, a simple installation is required before using this product. The specific steps are as follows:

  
1) Install the three feet

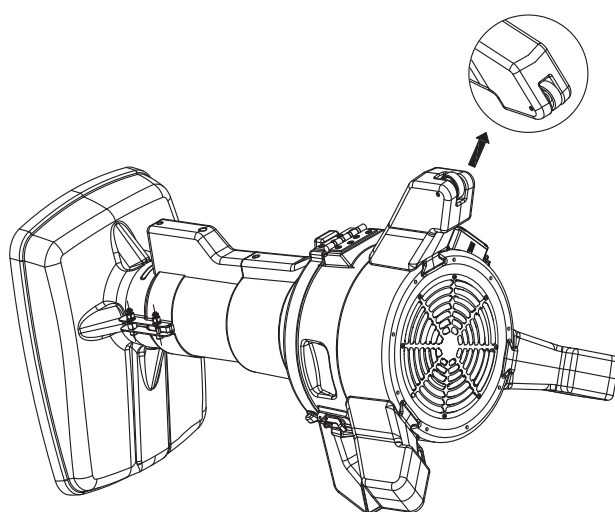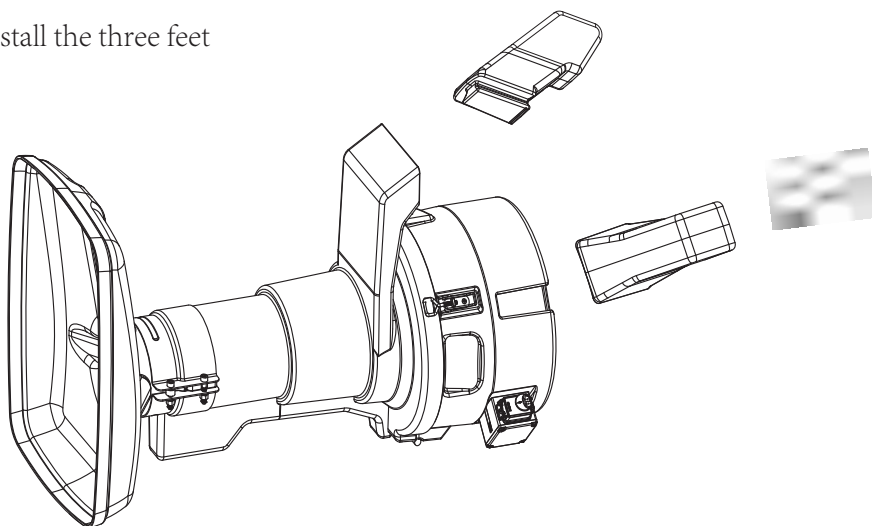


Find the wheeled foot and secure it into the slot under the hinge. Make sure all feet are properly seated and level with the base.




 
【 Safety Warning 】 : Ensure that the feet are installed before powering on! Operating without the feet installed will cause the motor to overheat, triggering a system protective shutdown.

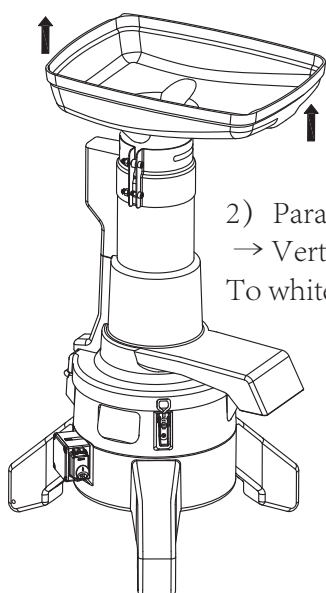

 
2) Parallel alignment with Ejector
→ Vertical elevation →
To white marker exposure

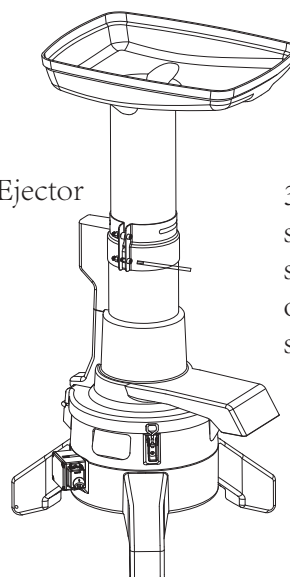

  3) Fasten the screws on both sides with a tool. The limit switch will then activate - otherwise, the equipment will not start. In case of an emergency, press the red button on the switch.

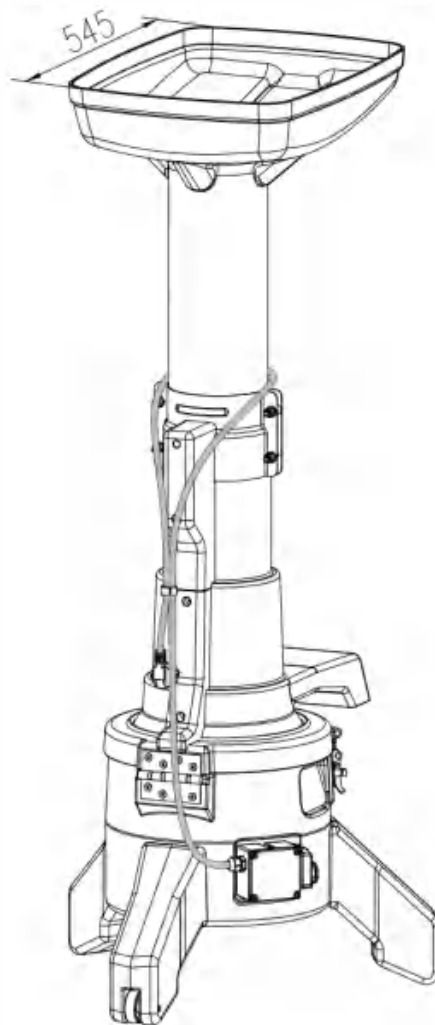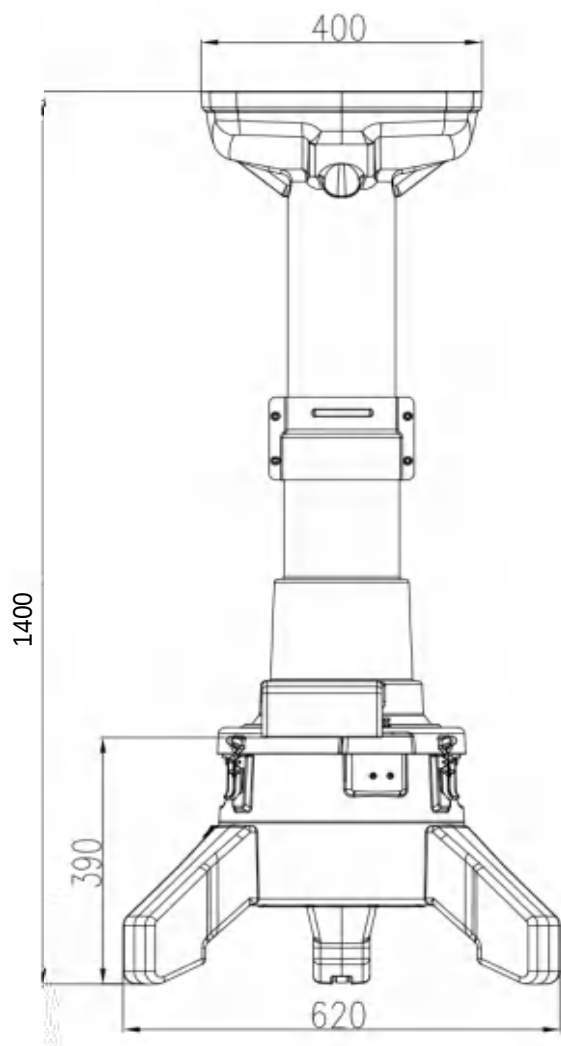

 Before high-pressure washing, disconnect All power sources.
Never contact blades with hands to prevent severe injury.

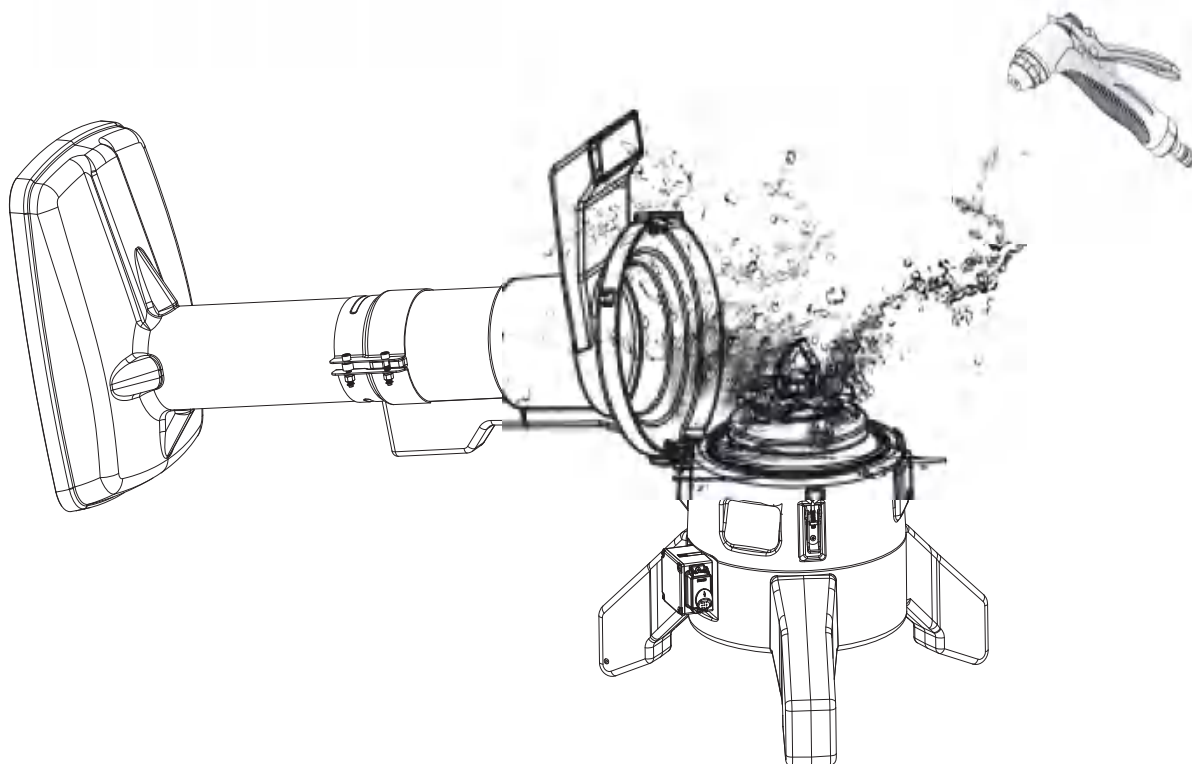

Safety Instructions

- Regularly check both the equipment and its electrical components (including the switch) for any damage. If damage is found, **immediately stop using the device!**
- Install the power cord to prevent it from coming into contact with sharp objects (e. knives). Ensure to unwind the cable completely.
- When using an extension cord, ensure its wire gauge is a minimum of 1.5 mm². Please ensure to completely unwind this extension cord as well. Do not use multi electrical outlets, as this unit is too powerful.

Risk of fire!

- The equipment only be used as stated in the description of its intended purpose, and while technically safe and in flawless condition. Please ensure the units safe condition prior to any use.
- Keep all packaging (plastic bags, cardboard, foam, etc.) away from children. Do not let them play with plastic bags.

Asphyxiation risk!

- This equipment is not suitable for use by children or individuals with reduced physical, sensory, or mental abilities, nor should it be used by anyone unfamiliar with its operation—unless supervised by someone knowledgeable in safety procedures.
- Always supervise children and pets around this equipment to prevent access and ensure their safety.

Special safety instruction:

- Within the work area, the operator is responsible for the safety of third parties.
- The device may be activated only after the hopper is securely mounted onto the lower part.
- Safety devices shall neither be operated manually nor shall they be removed.
- Do not turn on the device unless the hopper is correctly installed on the base.
- When transporting the electric fruit crusher, the unit must be shut off and removed from the power supply.
- Turn off the unit and disconnect supply lines before removing the hopper (e.g., for cleaning or maintenance purposes).
- Start the crusher before refilling and shut off only after complete processing of the filling material.

Noncompliance may lead to problems during the restarting process.

- The electric fruit crusher must be placed securely on a flat, stable surface.
- Latches must be fastened and the screws tightened to ensure a tight fit of the hopper.
- Avoid directing water toward the motor cover's ventilation openings. Danger of electrical shock!
- Caution: If the hopper is removed, Do not touch the blade directly with your hands. the blades may cause injuries, even if the motor is switched off.

Injury risk!

- Never reach inside the filler opening. Never place any objects other than those for which the crusher is intended for into the device.

Injury risk!

Technical data

Motor:	230V/50Hz;2KW
Rotational speed:	2800 RPM
Blades:	Device Pre-shredder, cutting blade and rotary knives made of stainless steel
ON/OFF:	Switch with zero voltage trigger and with accidental activation prevention device Min. 12 Amp.
Dimensions:	690mmx620mmx1400mm
Weight:	22kgs
Noise:	80 dB(A) during idle operation

Prior to its first use

- 1) Thoroughly clean the electric fruit crusher with water.
 - 2) Install securely on a flat, stable surface.
 - 3) Verify that the connection between the base and feed hopper is properly aligned and all screws are securely tightened. Operating the device
- Use only 230V/50Hz circuits
2. Connect exclusively to a single properly grounded outlet (16A fuse minimum)
 3. For enhanced safety, incorporate a residual-current device

Operational Notes:

- Unexpected shutdown suggests fruit blockage in cutting assembly
- Restart only after complete obstruction removal
- Consult safety manual before operation

How to use the electric fruit crusher:

Simply connect the crusher to the power supply and switch it on (we recommend using a heavy rubber cable with a suitable cross section and connector to protect the electrical cord). Once the motor has reached its full speed, filling the crusher with a steady supply of fruit can be started. Please ensure that the fruit is fed into the hopper in an amount that can be easily processed by the crusher. This will allow for trouble-free operation and optimal output of approximately 1,000 kg/hour.

Cleaning, maintenance, storage

Always turn off and unplug the crusher before cleaning.

- Clean the appliance promptly after each use to avoid dried fruit residue or sticky juices.
- Use only water with a soft brush or cloth—do not use wire brushes, harsh abrasives.
- Never allow water to contact electrical components or enter the motor housing.
- Do not submerge the device in water—this poses a risk of electric shock or fire.

As a maintenance measure only the shredder should be sharpened. The cutting blades can be turned/rotated to work again with a sharp knife edge. Always consider the safety instructions and remove the power plug from the mains during maintenance work.

To ensure the crusher's optimal service life, it should be stored in a dry place. Avoid contact between stainless steel parts (knives, shredders) and ferrous or corroded objects.

Troubleshooting

Never repair the machine yourself, always consult a qualified technician. In order to avoid any kind of danger, a faulty switch/plug motor and other components may only be replaced or repaired by the manufacturer.

Disposal

This symbol indicates that the electric fruit crusher must not be disposed of with regular household waste. To protect the environment and human health, always recycle or discard electrical equipment at designated collection points. Proper disposal helps prevent harmful environmental effects and supports the recycling and reuse of electronic materials.

For approved disposal locations, contact your local waste management or municipal authority.